

USER'S MANUAL



Uninterruptible Power System

IP-Invisimo-14

General Precautions

1. Before using **Invisimo**, read all instructions and cautionary markings on : (1) **Invisimo** (2) the batteries (3) this manual
2. **CAUTION** --To reduce risk of injury, charge only lead-acid type rechargeable batteries. Other types of batteries may cause damage and injury.
3. Do not expose **Invisimo** to rain, snow or liquids of any type. **Invisimo** is designed for indoor.
4. Do not disassemble **Invisimo**. Take it to a qualified service center when service or repair is required.
5. **WARNING:** Provide ventilation to outdoors from the battery compartment. The battery enclosure should be designed to prevent accumulation and concentration of hydrogen gas at the top of the compartment.
6. **NEVER** charge a frozen battery.
7. Be extra cautious when working with metal tools around batteries. Short-circuiting the batteries could cause an explosion.
8. For battery installation and maintenance: read the battery manufacturer's installation and maintenance instructions prior to operating.

Personnel Precautions

1. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
2. Avoid touching eyes while working near batteries.
3. Never smoke or allow a spark or flame in vicinity of a battery.
4. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with batteries. Batteries can produce a short-circuit current high enough to make metal melt, and could cause severe burns.
5. If a remote or automatic generator start system is used, disable the automatic starting circuit or disconnect the generator to prevent accident during servicing.

Introduction

Invisimo is a DC-to-AC inverter with auto line-to-battery transfer and integrated charging system, serving as an extended run UPS, a standalone power source or an automotive inverter.

Invisimo supplies power from AC power and DC source. When AC cable is connected to a wall socket, utility power goes to connected equipment(s) and/or charges the battery set via charging system. In UPS mode, **Invisimo** automatically convert battery energy into AC power for backing up the connected devices.


Features:

- ✓ 30Amp(40Amp) built in powerful smart charger for long backup time and extended battery life.
- ✓ High efficiency and low idle current to keep low operating costs.
- ✓ Quiet operation, heavy duty reliability.
- ✓ Ecologically smart and user friendly.
- ✓ Back-up, on-line, battery status, power status by LCD display.
- ✓ Short circuit and overload protection.
- ✓ Cold start (DC power on).
- ✓ Advanced battery management (ABM).
- ✓ Charging current can be adjusted by selector.

Operation

Front Panel Controls and LCD Indicators


Shown below are the controls and indicator lights on the front of **Invisimo**.

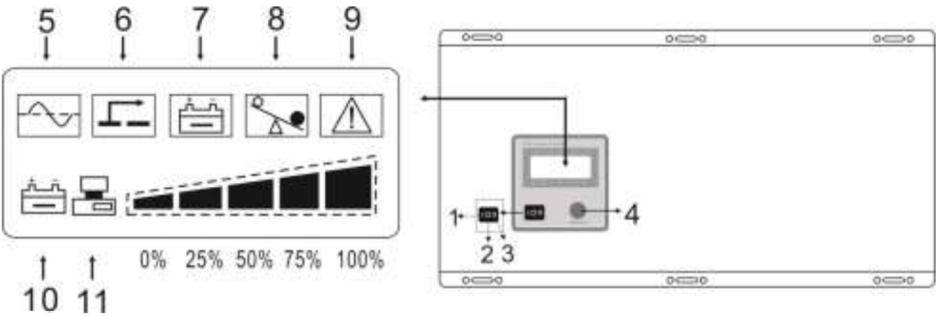

- 1. Power On: Please make sure the battery connection before you turn on the **Invisimo**
- 2. UPS Off
- 3. Charger Only
- 4. UPS Test Switch:When UPS is working under AC mode,it also activates the UPS’s self-test by press the bottom.
- 5. Line-On: AC Normal
- 6. O-Temp. : If the UPS is over temperature, the light will turn on and the alarm will sound continuously.
- 7. Back-Up: Battery in back-up
- 8. Over Load: If the UPS is overloaded, the light will turn on and the alarm will sound continuously
- 9. UPS Cut-Off: Overload or Cut-off
- 10. Battery Level: A bar graph showing how much of the UPS battery is being used.
- 11. Load Level: A bar graph showing how much of the UPS power is being used.

Back Panel Description

Shown below are the components on the back of **Invisimo**.

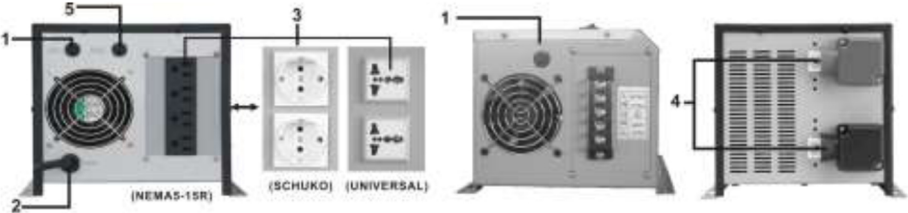

- 1. Input Breaker
- 2. AC Input Connector
- 3. Output Receptacle(s)
- 4. DC Input Connector (Battery Terminal)
- 5. Output Breaker


Battery Connection

- Step 1.** Connect to 12V(24V) battery. “+” is positive, “-” is negative. Reverse polarity connection will blow internal fuse and may damage inverter permanently.(See Specification)
- Step 2.** DC to AC inverters require high amperage / low voltage DC power to low amperage / high voltage AC power. To operate properly connect inverter DC input terminals direct to battery with heaviest wire available, see chart below:


Model	DC Input Voltage	Max. Watts Out	Approx. Amps Req'd	Wire Gauge
Invisimo-700	12V	450W	65A	10AWG*2
Invisimo-1000	12V	600W	85A	8AWG*2
Invisimo-1500	12V	900W	125A	4AWG*2
Invisimo-2000	24V	1200W	85A	8AWG*2
Invisimo-3200	24V	2000W	140A	2AWG*2

Step 3. Connect battery cables to your batteries


- Single battery connection: When using a single battery, its voltage must be equal to the voltage of **Invisimo** Nominal Input Voltage (see specs)

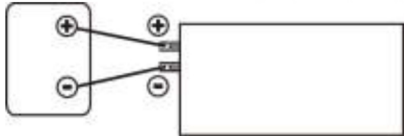

- Series battery connection: When using multiple batteries in series, all batteries must be equal in voltage and amp hour capacity, and the sum of their voltages must be equal to the voltage of **Invisimo** Nominal Input Voltage (see specs)

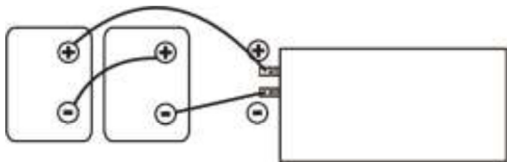

- Parallel battery connection: When using multiple batteries in parallel, each battery's voltage must be equal to the voltage of **Invisimo** Nominal Input Voltage (see specs)

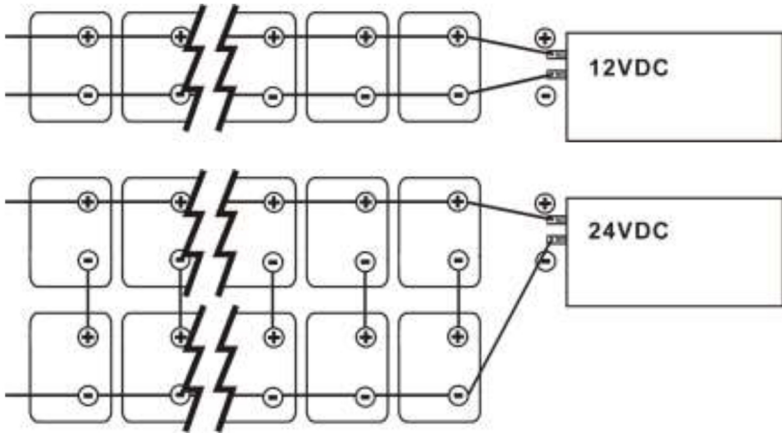

Step 4.

- ※ Charger Current Switch: You can adjust the position of Dip Switch to adjust charging currency of battery.

 30Amp(40Amp)  20Amp(30Amp)  10Amp(20Amp)  5Amp(10AMP)

Specification

MODEL	Invisimo	700	1000	1500	2000	3200
CAPACITY	VA / Watts	700VA / 450W	1000VA / 600W	1500VA / 900W	2000VA / 1200W	3200VA / 2000W
INPUT	AC Voltage	115VAC / 230VAC, 1 Phase + Neutral				
	Voltage Tolerance (AC)	90~135VAC / 187~264VAC ±4%				
	DC Voltage	12VDC			24VDC	
	Voltage Tolerance (DC)	10VDC ~ 14VDC			20VDC ~ 28VDC	
	Frequency	47Hz ~ 53Hz / 57Hz ~ 63Hz				
OUTPUT	Voltage	115VAC / 230VAC				
	Voltage Tolerance	±7%				
	Frequency	50Hz or 60Hz				
	Frequency Tolerance	±3Hz in Battery Mode				
	Transfer Time	Maximum 10 milliseconds				
	Voltage Waveform	Modified Sinewave				
BATTERY	Type	Maintenance free dry type (suggested)				
	Capacity	Up to 1000Ah				
	Battery Low Level	10.8V ±0.2V			21V ±0.5V	
	Battery Cut-off Level	10V ±0.2V			20V ±0.5V	
	Battery house	External; Rack or Cabinet (Optional)				
CHARGER	Battery Charge Voltage	13.6VDC ±0.2VDC			27.5V ±0.3V	
	Charge Capacity	40A max. (Adjustable)				
	Over Charge Protection	14.5VDC ±0.5VDC			29V ±0.5V	
INDICATORS & CONTROL PANEL	Control Panel		On/Off button, Battery charge current adjustment			
	Indicators	Line Mode	Line-On LCD lighting			
		Battery Mode	Back-Up LCD lighting			
		Over Load	O-Load LCD lighting			
		Over Temp.	O-Temp LCD lighting			
		UPS Off	Cut-Off LCD lighting			
		Load Level	5-Step LCD lighting			
		Battery Level	5-Step LCD lighting			
PROTECTION	Full Protection		Over load, Short circuit, Over charge, Over temperature, Input & Output fuse			
	Noise Level		Less than 45 dBA (at 1 meter)			
	Operating Temperature		0℃ ~ 40℃			
	Storage Temperature		-20℃ ~ +70℃			
	Relative Humidity		Maximum 0-90% (non-condensing)			
	Type of Cooling		Forced with fan			
	Installation Height		<3000 meters, elevation			
PHYSICAL	Dimension, D*H*W		420*160*218mm			
	Weight, w/o Battery		9kgs	11kgs	14kgs	16kgs
DESIGN, MANUFACTURE, SERVICES			ISO 9001			